The Original

ASSEMBLY INSTRUCTIONS



Palloon Sold Soparatoly





17" CAR WINDOW BRACKET SYSTEM (#35010) ASSEMBLY INSTRUCTIONS

PARTS LIST A - 17" Balloon Gizmo" Balloon Balloon Sold Separately B - Standard Connector Clip Standard Rod D - Window

TOOLS & TIPS

Air Inflator (sold separately)
Our High Power Inflator (#35057) is the perfect solution for your inflation needs.
Inflates balloons in seconds!

- Make sure you have the necessary parts and tools before beginning. NOTE: Requires one 17" Balloon Gizmo™ balloon (sold separately).
- BEFORE INFLATING THE BALLOON, insert the Standard Connector Clip (B) into the pocket located on the bottom of the Balloon Gizmo™ Balloon (A).
- 3. Fold the balloon flaps over the connector clip to secure it in place (photo 1).
- 4. Attach **Standard Rod (C)** to the balloon by aligning the square slots on the cup end of the rod with the teeth on the connector clip. Push pieces together until they click (photo 2).
- 5. Inflate balloon until the surface is smooth and wrinkle free. NOTE: Slightly under-inflate in hot climates to allow space for air to expand.
- 6. Roll car window down. Slide Window Bracket (D) over the lip of window (photo 3). NOTE: Place bracket on rear half of the window for optimum fit.
- 7. Roll up window. The bracket is designed to allow the car window to completely seal against inclement weather.
- 8. Attach the assembled balloon & rod to the window bracket by aligning the locking peg on the rod with the slotted hole on the bracket. Slide the post into the bracket and twist the rod a ¼ turn counter-clockwise to lock in place (photo 4).









