

ASSEMBLY INSTRUCTIONS



Balloon Sold Separately






JUMBO 36" IN-GROUND SYSTEM (#35025) ASSEMBLY INSTRUCTIONS




- Make sure you have the necessary parts and tools before beginning. NOTE: Requires one Jumbo Balloon Gizmo™ balloon (sold separately).
- 2. Do NOT inflate balloon until Step 10.
- 3. Locate the channel hole in the pocket on the bottom of the **Balloon Gizmo**™ **Jumbo Balloon (A)**. Use an air inflator to blow air into the channel (photo 1). NOTE: This will not inflate the balloon, but will help loosen the interior channel of the balloon for Step 4.
- 4. Insert the **Stabilizing Rod (B)** (rubber tipped end first) through the entire channel in the center of the balloon. *NOTE: The rod will NOT protrude from the top of the balloon.*
- 5. Insert the first half of the Jumbo Connector Clip (C) (with the threaded post) into the pocket on the balloon. Slide the end of the stabilizing rod through the hollow center of the threaded post (photo 2).
- 6. Fold the balloon flaps over the threaded post of the connector clip making sure to align the pegs with the openings in the flaps (photo 3).
- 7. Lay the second half of the jumbo connector clip onto the first half. The holes and pegs of each half will align when properly seated. NOTE: Clip will be loose until it is attached to the jumbo rod.
- 8. Attach the **Standard Connector Clip (D)** to the **Jumbo Rod with Spike (E)** by aligning the teeth on the connector clip with the square slots on the cup of the jumbo rod. Push the pieces together until they click (photo 4).

CONTINUED ON NEXT PAGE

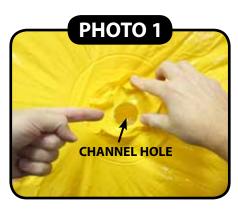





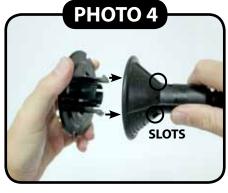

TOOLS & TIPS

Air Inflator (sold separately)
Our High Power Inflator (#35057) is the perfect solution for your inflation needs.
Inflates balloons in seconds!

Rubber Mallet (not included)
We recommend using a rubber mallet to drive the stake into the ground. A regular hammer will cause excessive wear and damage over time.







JUMBO 36" IN-GROUND SYSTEM (#35025) ASSEMBLY INSTRUCTIONS



- 9. Attach **Jumbo Rod with Spike (E)** to the balloon by screwing the post of the jumbo connector clip into the threaded end of the cup on the jumbo rod. Continue until tight and the locking button on the jumbo connector clip is seated in one of the notches on the standard connector clip (photo 5).
- 10. Inflate the balloon using an air inflator until the surface is smooth and wrinkle free. NOTE: Slightly underinflate in hot climates to allow space for air to expand.
- 11. Drive **Jumbo Ground Stake (F)** into the ground in your desired location using a rubber mallet. Make sure to insert the stake up to the collar for maximum stability.*
- 12. Fasten **Metal Spike (G)** onto **Jumbo Pole (H)** by screwing the spike into the threaded end of the pole (photo 6).
- 13. Insert the metal spike and pole into the hole on top of the ground stake. Tighten the wingnut on the ground stake to secure the pole in place.
- 14. Remove the wingnut from the top of the jumbo pole. Slide the *EMPTY* **Water Base (I)** down the pole and fill the base with water (photo 7). *NOTE:* For more permanent installation, the base can also be filled with sand.
- 15. Attach the assembled jumbo balloon and rod by inserting the spiked end of the jumbo rod into the opening on top of the pole. Secure in place by re-screwing the wingnut into the threaded hole (photo 8).
- * If you are planning to display indoors or on a hard surface, omit Steps 11 through 14. Instead, place the water base in your desired location and fill with water. Insert the jumbo pole (threaded side down) through the hole in the top of the base and proceed to Step 15.



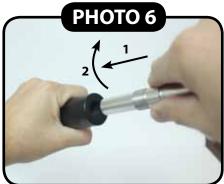

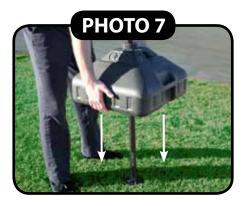



TOOLS & TIPS

Air Inflator (sold separately)
Our High Power Inflator (#35057) is the perfect solution for your inflation needs.
Inflates balloons in seconds!

Rubber Mallet (not included)
We recommend using a rubber mallet to
drive the stake into the ground. A regular
hammer will cause excessive wear and
damage over time.

