

The Original
**Balloon
GIZMO**

DOUBLE 17" IN-GROUND SYSTEM
ASSEMBLY INSTRUCTIONS



35020

Double 17" In-Ground System



0 91451 35020 2


Balloons Sold Separately





DOUBLE 17" IN-GROUND SYSTEM (#35020) ASSEMBLY INSTRUCTIONS

PARTS LIST

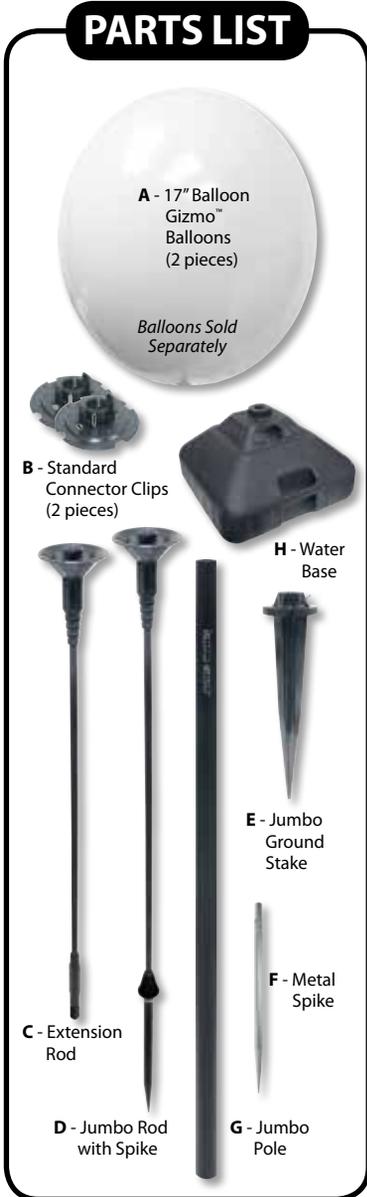

TOOLS & TIPS

Air Inflator (sold separately)
Our High Power Inflator (#35057) is the perfect solution for your inflation needs.
Inflates balloons in seconds!

Rubber Mallet (not included)
We recommend using a rubber mallet to drive the stake into the ground. A regular hammer will cause excessive wear and damage over time.

1. Make sure you have the necessary parts and tools before beginning.
NOTE: Requires two 17" Balloon Gizmo™ balloons (sold separately).
2. BEFORE INFLATING THE BALLOONS, insert a **Standard Connector Clip (B)** into the pocket located on the bottom of each **Balloon Gizmo™ Balloon (A)**.
3. Fold the balloon flaps over the connector clips to secure them in place (photo 1).
4. Decide which balloon will be on the lower half of the assembly. Use this balloon for Step 5.
5. Slide **Extension Rod (C)** completely through the balloon by inserting the threaded end into the guide hole on the top of the balloon and out the guide hole on the bottom. The rod will protrude from the center of the connector clip when done (photo 2).
NOTE: For easier insertion, the guide holes can be widened by stretching them with a sharpened pencil.
6. Screw the threaded end of the extension rod into the cup end of the **Jumbo Rod with Spike (D)** (photo 3).
7. Align the teeth on the connector clip with the square slots on the cup of the jumbo rod. Lock the balloon in place by pushing the pieces together until they click (photo 4).
8. Attach the remaining balloon to the cup on the extension rod using the same method as Step 7.

PHOTO 1



PHOTO 2



PHOTO 3



PHOTO 4



**CONTINUED ON
NEXT PAGE**

DOUBLE 17" IN-GROUND SYSTEM (#35020) ASSEMBLY INSTRUCTIONS

PARTS LIST



TOOLS & TIPS

Air Inflator (sold separately)
Our High Power Inflator (#35057) is the perfect solution for your inflation needs.
Inflates balloons in seconds!

Rubber Mallet (not included)
We recommend using a rubber mallet to drive the stake into the ground. A regular hammer will cause excessive wear and damage over time.

9. Inflate both balloons with an air inflator until the surface is smooth and wrinkle free. *NOTE: Slightly under-inflate in hot climates to allow space for air to expand.*

10. Drive **Jumbo Ground Stake (E)** into the ground in your desired location using a rubber mallet. Make sure to insert the stake up to the collar for maximum stability.*

11. Fasten **Metal Spike (F)** onto **Jumbo Pole (G)** by screwing the spike into the threaded end of the pole (photo 5).

12. Insert the metal spike and pole into the hole on top of the ground stake. Tighten the wingnut on the stake to secure the pole in place (photo 6).

13. Remove the wingnut from the top of the jumbo pole.

14. Slide the **EMPTY Water Base (H)** down onto the jumbo pole and fill the base with water (photo 7). *NOTE: For more permanent installation, the base can also be filled with sand.*

15. Attach the assembled parts (from Steps 1-9) by inserting the spiked end of the jumbo rod into the opening on top of the jumbo pole. Secure everything in place by re-screwing the wingnut (from Step 13) into the threaded hole at the top of the pole (photo 8).

PHOTO 5

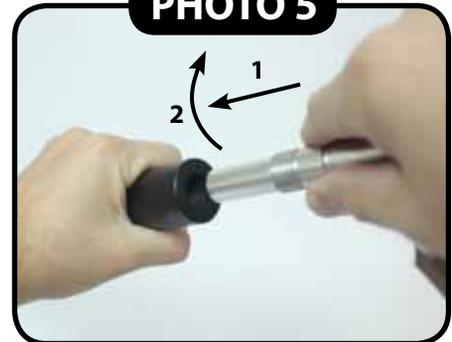


PHOTO 6



PHOTO 7



PHOTO 8



* If you are planning to display indoors or on a hard surface, omit Steps 10 through 13. Instead, place the water base in your desired location and fill with water. Insert the jumbo pole (threaded side down) through the hole in the top of the base and proceed to Step 14.