

The Original
**Balloon
GIZMO**

DOUBLE 17" IN-GROUND SYSTEM
ASSEMBLY INSTRUCTIONS



35021

Double 17" In-Ground System



Balloons Sold Separately





DOUBLE 17" IN-GROUND SYSTEM (#35021) ASSEMBLY INSTRUCTIONS

PARTS LIST



A - 17" Balloon Gizmo™ Balloons (2 pieces)

Balloons Sold Separately



B - Standard Connector Clips (2 pieces)



C - Extension Rod

E - Metal Spike

D - Jumbo Rod with Spike

F - Jumbo Pole

TOOLS & TIPS

Air Inflator (sold separately)

Our High Power Inflator (#35057) is the perfect solution for your inflation needs. **Inflates balloons in seconds!**

Rubber Mallet (not included)

We recommend using a rubber mallet to drive the stake into the ground. A regular hammer will cause excessive wear and damage over time.

1. Make sure you have the necessary parts and tools before beginning. *NOTE: Requires two 17" Balloon Gizmo™ balloons (sold separately).*

2. BEFORE INFLATING THE BALLOONS, insert a **Standard Connector Clip (B)** into the pocket located on the bottom of each **Balloon Gizmo™ Balloon (A)**.

3. Fold the balloon flaps over the connector clips to secure them in place (photo 1).

4. Decide which balloon will be on the lower half of the assembly. Use this balloon for Step 5.

5. Slide **Extension Rod (C)** completely through the balloon by inserting the threaded end into the guide hole on the top of the balloon and out the guide hole on the bottom. The rod will protrude from the center of the connector clip when done (photo 2). *NOTE: For easier insertion, the guide holes can be widened by stretching them with a sharpened pencil.*

6. Screw the threaded end of the extension rod into the cup end of the **Jumbo Rod with Spike (D)** (photo 3).

7. Align the teeth on the connector clip with the square slots on the cup of the jumbo rod. Lock the balloon in place by pushing the pieces together until they click (photo 4).

8. Attach the remaining balloon to the cup on the extension rod using the same method as Step 7.

PHOTO 1



PHOTO 2



PHOTO 3



PHOTO 4



**CONTINUED ON
NEXT PAGE**

DOUBLE 17" IN-GROUND SYSTEM (#35021) ASSEMBLY INSTRUCTIONS

PARTS LIST



TOOLS & TIPS

Air Inflator (sold separately)
Our High Power Inflator (#35057) is the perfect solution for your inflation needs.
Inflates balloons in seconds!

Rubber Mallet (not included)
We recommend using a rubber mallet to drive the stake into the ground. A regular hammer will cause excessive wear and damage over time.

9. Inflate both balloons with an air inflator until the surface is smooth and wrinkle free. *NOTE: Slightly under-inflate in hot climates to allow space for air to expand.*

10. Attach **Metal Spike (E)** onto **Jumbo Pole (F)** by screwing the spike into the threaded end of the pole (photo 5).

11. Anchor the jumbo pole in your desired location by pushing the metal spike into the ground until the spike is no longer visible.*

12. Loosen the wingnut on the top of the jumbo pole.

13. Attach the assembled parts (from Steps 1-9) by inserting the spiked end of the jumbo rod into the opening on top of the jumbo pole. Secure everything in place by re-tightening the wingnut at the top of the pole (photo 6).

PHOTO 5

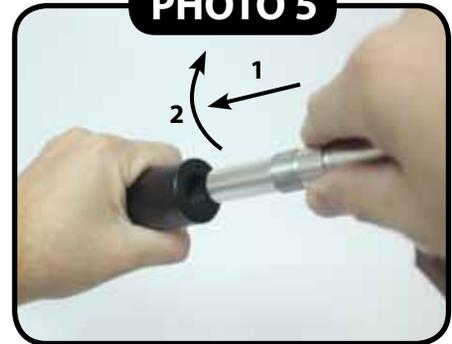


PHOTO 6



*Certain settings may require additional items (sold separately) to properly install and display Balloon Gizmo™ systems. See below for information.

VERSATILE SOLUTIONS FOR EVERY INSTALLATION

Indoor & Hard Surface Installation



Balloon Gizmo™
Water Base
#35066

For displaying indoors or on a hard surface, omit Steps 10 - 11. Instead, place the water base in your desired location and fill with water. Insert the jumbo pole (threaded side down) through the hole in the top of the base and proceed to Step 12.

Loose Soil Installation



Balloon Gizmo™
Jumbo Ground Stake
#35067

For displaying in locations with loose or sandy soil, drive the stake into the ground using a rubber mallet. Omit Step 11. Insert the metal spike and pole into the open hole on top of the ground stake. Tighten the wingnut to secure the pole in place.