

The Original
**Balloon
GIZMO**

JUMBO IN-GROUND BOUQUET SYSTEM
ASSEMBLY INSTRUCTIONS



35038

Jumbo In-Ground Bouquet



0 91451 35038 7

Balloons Sold Separately





JUMBO IN-GROUND BOUQUET SYSTEM (#35038) ASSEMBLY INSTRUCTIONS

PARTS LIST



TOOLS & TIPS

Air Inflator (sold separately)
Our High Power Inflator (#35057) is the perfect solution for your inflation needs.
Inflates balloons in seconds!

Rubber Mallet (not included)
We recommend using a rubber mallet to drive the stake into the ground. A regular hammer will cause excessive wear and damage over time.

1. Make sure you have the necessary parts & tools before beginning (*balloons sold separately*).
2. BEFORE INFLATING THE 17" BALLOONS, insert a **Standard Connector Clip (C)** into the pocket located on the bottom of each **Balloon Gizmo™ 17" Balloon (B)**. *NOTE: For instructions on inflating the jumbo balloon refer to Step 11.*
3. Fold the balloon flaps over the connector clips to secure them in place (photo 1).
4. Attach a balloon to each **Standard Rod (D)** by aligning the square slots on the cup end of each rod with the teeth on the connector clip. Push pieces together until they click (photo 2).
5. Inflate each balloon until the surface is smooth and wrinkle free. *NOTE: Slightly under-inflate in hot climates to allow space for air to expand.*
6. Drive **Jumbo Ground Stake (F)** into the ground in your desired location using a rubber mallet. Make sure to insert the stake up to the collar for maximum stability.*
7. Fasten **Metal Spike (G)** onto **Jumbo Pole (H)** by screwing the spike into the threaded end of the pole (photo 3).
8. Insert the metal spike and pole into the hole on top of the ground stake. Tighten the wingnut on the ground stake to secure the pole in place. (photo 4).

PHOTO 1



PHOTO 2

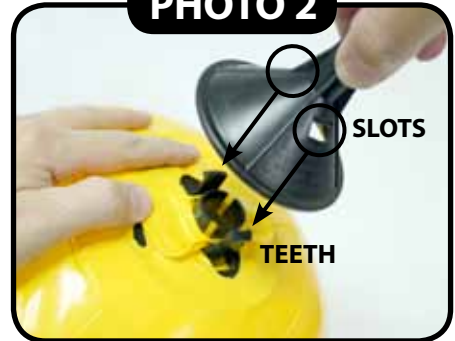


PHOTO 3


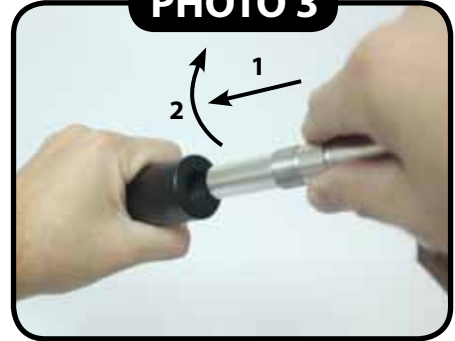


PHOTO 4

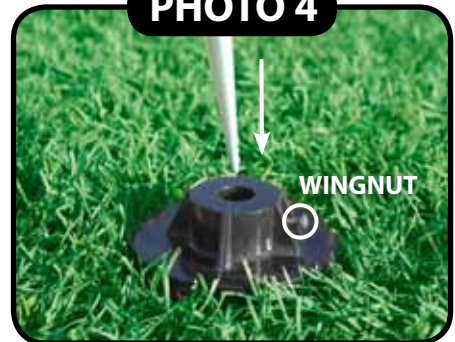

CONTINUED ON NEXT PAGE

* If you are planning to display indoors or on a hard surface, omit Steps 6 through 9. Instead, place the water base in your desired location and fill with water. Insert the jumbo pole (threaded side down) through the hole in the top of the base and proceed to Step 10.

JUMBO IN-GROUND BOUQUET SYSTEM (#35038) ASSEMBLY INSTRUCTIONS

PARTS LIST



TOOLS & TIPS

Air Inflator (sold separately)
Our High Power Inflator (#35057) is the perfect solution for your inflation needs.
Inflates balloons in seconds!

Rubber Mallet (not included)
We recommend using a rubber mallet to drive the stake into the ground. A regular hammer will cause excessive wear and damage over time.

9. Remove the wingnut from the top of the jumbo pole.

10. Slide the **EMPTY Water Base (I)** down the pole and fill the base with water (photo 5). *NOTE: For more permanent installation, the base can also be filled with sand.*

11. Locate the channel hole in the pocket on the bottom of the **Balloon Gizmo™ Jumbo Balloon (A)**. Use an air inflator to blow air into the channel (photo 6). *NOTE: This will help loosen the interior channel of the balloon for Step 12.*

12. Do NOT inflate balloon until Step 19.

13. Insert the **Stabilizing Rod (L)** (rubber tipped end first) through the entire channel in the center of the balloon. *NOTE: The rod will NOT protrude from the top of the balloon.*

14. Insert the first half of the **Jumbo Connector Clip (J)** (with the threaded post) into the pocket on the balloon. Slide the end of the stabilizing rod through the hollow center of the threaded post (photo 7).

15. Fold the balloon flaps over the threaded post of the connector clip making sure to align the pegs with the openings in the flaps (photo 7).

16. Lay the second half of the jumbo connector clip onto the first half. The holes and pegs of each half will align when properly seated. *NOTE: Clip will be loose until it is attached to the jumbo rod.*

17. Attach the **Standard Connector Clip (C)** to the **Jumbo Rod with Spike (E)** by aligning the teeth on the connector clip with the square slots on the cup of the jumbo rod. Push the pieces together until they click (photo 4).

PHOTO 5

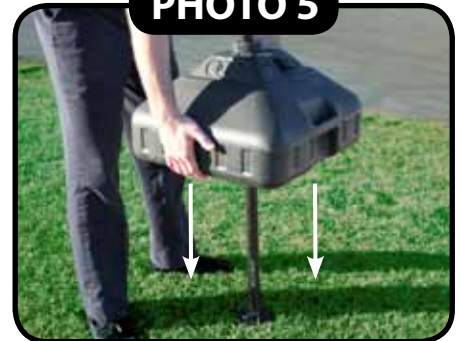


PHOTO 6



PHOTO 7



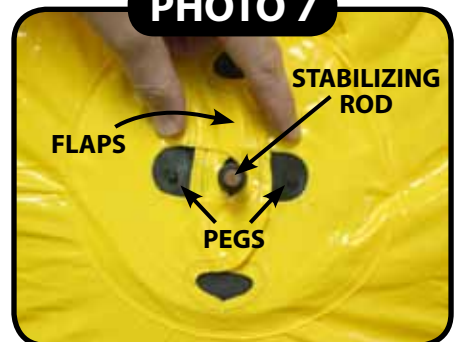


PHOTO 8

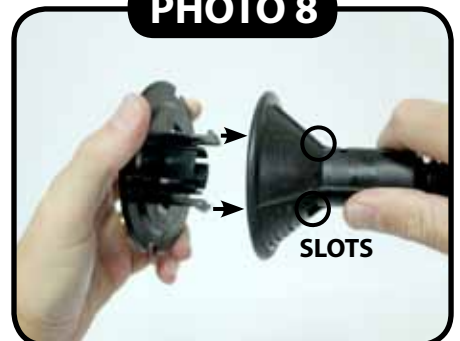

JUMBO IN-GROUND BOUQUET SYSTEM (#35038) ASSEMBLY INSTRUCTIONS

PARTS LIST

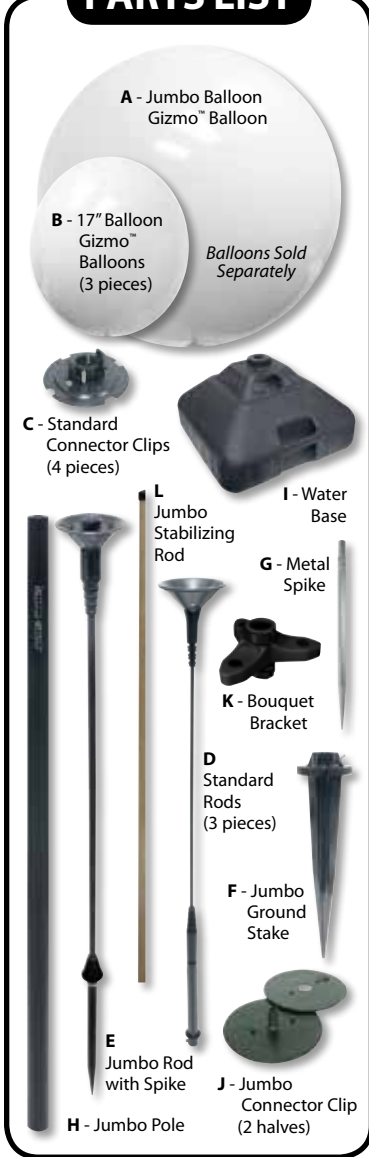

TOOLS & TIPS

Air Inflator (sold separately)
Our High Power Inflator (#35057) is the perfect solution for your inflation needs.
Inflates balloons in seconds!

Rubber Mallet (not included)
We recommend using a rubber mallet to drive the stake into the ground. A regular hammer will cause excessive wear and damage over time.

18. Attach the Jumbo Rod to the balloon by screwing the post of the jumbo connector clip into the threaded end of the cup on the jumbo rod. Continue until tight and the locking button on the jumbo connector clip is seated in one of the notches on the standard connector clip (photo 5).

19. Inflate the balloon using an air inflator until the surface is smooth and wrinkle free. *NOTE: Slightly under-inflate in hot climates to allow space for air to expand.*

If adding Bouquet Upgrade Kit #35082 (sold separately), follow the instructions included with that kit from this point on, otherwise, continue to Step 19.

20. Loosen the clamps on **Bouquet Bracket (K)** and slide it onto the jumbo pole. *NOTE: To slide the bracket, grip the arms on either side of the clamps, pull them slightly apart, and move the bracket into place* (photo 6).

21. Insert the spiked end of the assembled jumbo rod and balloon into the opening on top of the jumbo pole. Secure in place by re-screwing the wingnut (from Step 9) into the threaded hole at the top of the pole (photo 7).

22. Attach the three fully assembled standard rods to the bracket by aligning the locking peg on each rod with the slotted holes on the bracket. Slide each rod in and twist a ¼ turn counter-clockwise to lock in place (photo 8).

23. Adjust the final vertical position of the bouquet bracket assembly and secure it in place by relocking the clamps. *NOTE: When properly assembled, the lower layer of balloons will lightly touch the bottom of the jumbo balloon.*

PHOTO 5



PHOTO 6

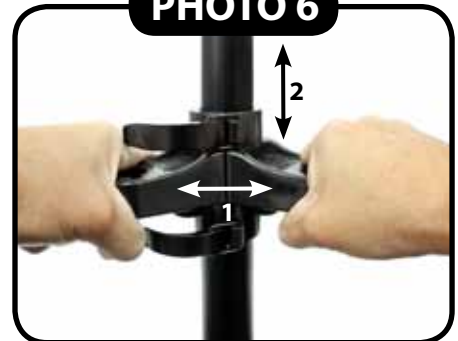


PHOTO 7



PHOTO 8

