

The Original
**Balloon
GIZMO**

17" FENCE POST SYSTEM
ASSEMBLY INSTRUCTIONS



35040
17" Fence Post System



0 9 1451 35040 0

Balloon Sold Separately



Balloon Gizmo™

17" FENCE POST OR POLE SYSTEM (#35040) ASSEMBLY INSTRUCTIONS

PARTS LIST



TOOLS & TIPS

Flat Head Screwdriver
(not included)

Air Inflator (sold separately)
Our High Power Inflator (#35057) is the perfect solution for your inflation needs.
Inflates balloons in seconds!

1. Make sure you have the necessary parts and tools before beginning. *NOTE: Requires one 17" Balloon Gizmo™ balloon and two hose clamps (sold separately).*

2. BEFORE INFLATING THE BALLOON, insert the **Standard Connector Clip (B)** into the pocket located on the bottom of the **Balloon Gizmo™ Balloon (A)**.

3. Fold the balloon flaps over the connector clip to secure it in place (photo 1).

4. Attach **Standard Rod (C)** to the balloon by aligning the square slots on the cup end of the rod with the teeth on the connector clip. Push pieces together until they click (photo 2).

5. Inflate balloon until the surface is smooth and wrinkle free. *NOTE: Slightly under-inflate in hot climates to allow space for air to expand.*

6. Unscrew **Clamps (D)** and insert them through the slots in **Fence Post Bracket (E)** (photo 3). *NOTE: For thicker posts or poles, it may be necessary to use larger clamps (not included).*

7. Secure the clamps around the post at the desired height, tightening them until the fence bracket does not move.

8. Attach the assembled balloon & rod to the fence bracket by aligning the locking peg on the rod with the slotted hole on the bracket. Slide the post into the bracket and twist the rod a ¼ turn counter-clockwise to lock in place (photo 4).

PHOTO 1



PHOTO 2

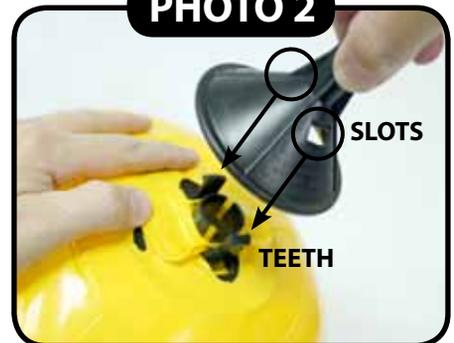


PHOTO 3



PHOTO 4

