

The Original  
**Balloon  
GIZMO**

**JUMBO 36" FENCE POST SYSTEM**  
**ASSEMBLY INSTRUCTIONS**



**35045**

Jumbo Fence Post System



Balloon Sold Separately



## JUMBO 36" FENCE POST SYSTEM (#35045) ASSEMBLY INSTRUCTIONS

### PARTS LIST



### TOOLS & TIPS

**Flat Head Screwdriver**  
*(not included)*

**Air Inflator** *(sold separately)*  
Our High Power Inflator (#35057) is the perfect solution for your inflation needs.  
**Inflates balloons in seconds!**

1. Make sure you have the necessary parts and tools before beginning.  
*NOTE: Requires one Jumbo Balloon Gizmo™ balloon (sold separately).*

2. Do NOT inflate balloon until Step 10.

3. Locate the channel hole in the pocket on the bottom of the **Balloon Gizmo™ Jumbo Balloon (A)**. Use an air inflator to blow air into the channel (photo 1).  
*NOTE: This will not inflate the balloon, but will help loosen the interior channel of the balloon for Step 4.*

4. Insert the **Stabilizing Rod (B)**, rubber tipped end first, through the entire channel in the center of the balloon.  
*NOTE: The rod will NOT protrude from the top of the balloon.*

5. Insert the first half of the **Jumbo Connector Clip (C)** (with the threaded post) into the pocket on the balloon. Slide the end of the stabilizing rod through the hollow center of the threaded post (photo 2).

6. Fold the balloon flaps over the threaded post of the connector clip making sure to align the pegs with the openings in the flaps (photo 3).

7. Lay the second half of the jumbo connector clip onto the first half. The holes and pegs of each half will align when properly seated. *NOTE: Clip will be loose until it is attached to the jumbo rod.*

8. Attach the **Standard Connector Clip (D)** to the **Jumbo Rod with Spike (E)** by aligning the teeth on the connector clip with the square slots on the cup of the jumbo rod. Push the pieces together until they click (photo 4).

### PHOTO 1




### PHOTO 2



### PHOTO 3



### PHOTO 4

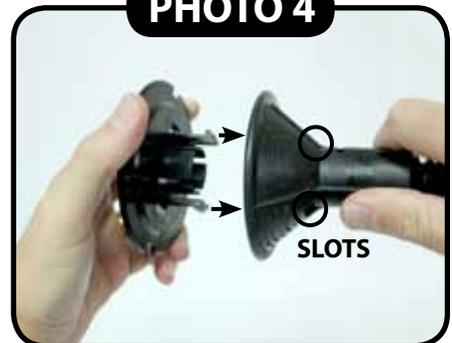

**CONTINUED ON  
NEXT PAGE**

## JUMBO 36" FENCE POST SYSTEM (#35045) ASSEMBLY INSTRUCTIONS

### PARTS LIST



### TOOLS & TIPS

**Flat Head Screwdriver**  
(not included)

**Air Inflator (sold separately)**  
Our High Power Inflator (#35057) is the perfect solution for your inflation needs.  
**Inflates balloons in seconds!**

9. Attach **Jumbo Rod with Spike (E)** to the balloon by screwing the post of the jumbo connector clip into the threaded end of the cup on the jumbo rod. Continue until tight and the locking button on the jumbo connector clip is seated in one of the notches on the standard connector clip (photo 5).

10. Inflate the balloon using an air inflator until the surface is smooth and wrinkle free. *NOTE: Slightly under-inflate in hot climates to allow space for air to expand.*

11. Unscrew **Clamps (F)** and insert them through the slots in **Fence Post Brackets (G)** (photo 6). *NOTE: For thicker posts or poles, it may be necessary to use larger clamps - not included.*

12. Secure the first bracket near the top of the post by tightening the clamps around the post until the fence bracket does not move.

13. Repeat Step 12 with the remaining two brackets working your way down the post. *NOTE: The brackets should be aligned vertically and touching each other (photo 7).*

14. Attach the assembled balloon & rod to the fence by sliding the spiked end of the jumbo rod through the slotted holes of the three brackets (Photo 8).

15. Secure the jumbo rod by screwing a wingnut (originally taped to the back of the bracket) into the TOP BRACKET ONLY (photo 8). *NOTE: Tightening wingnuts on the lower two brackets will cause damage to the rod.*

